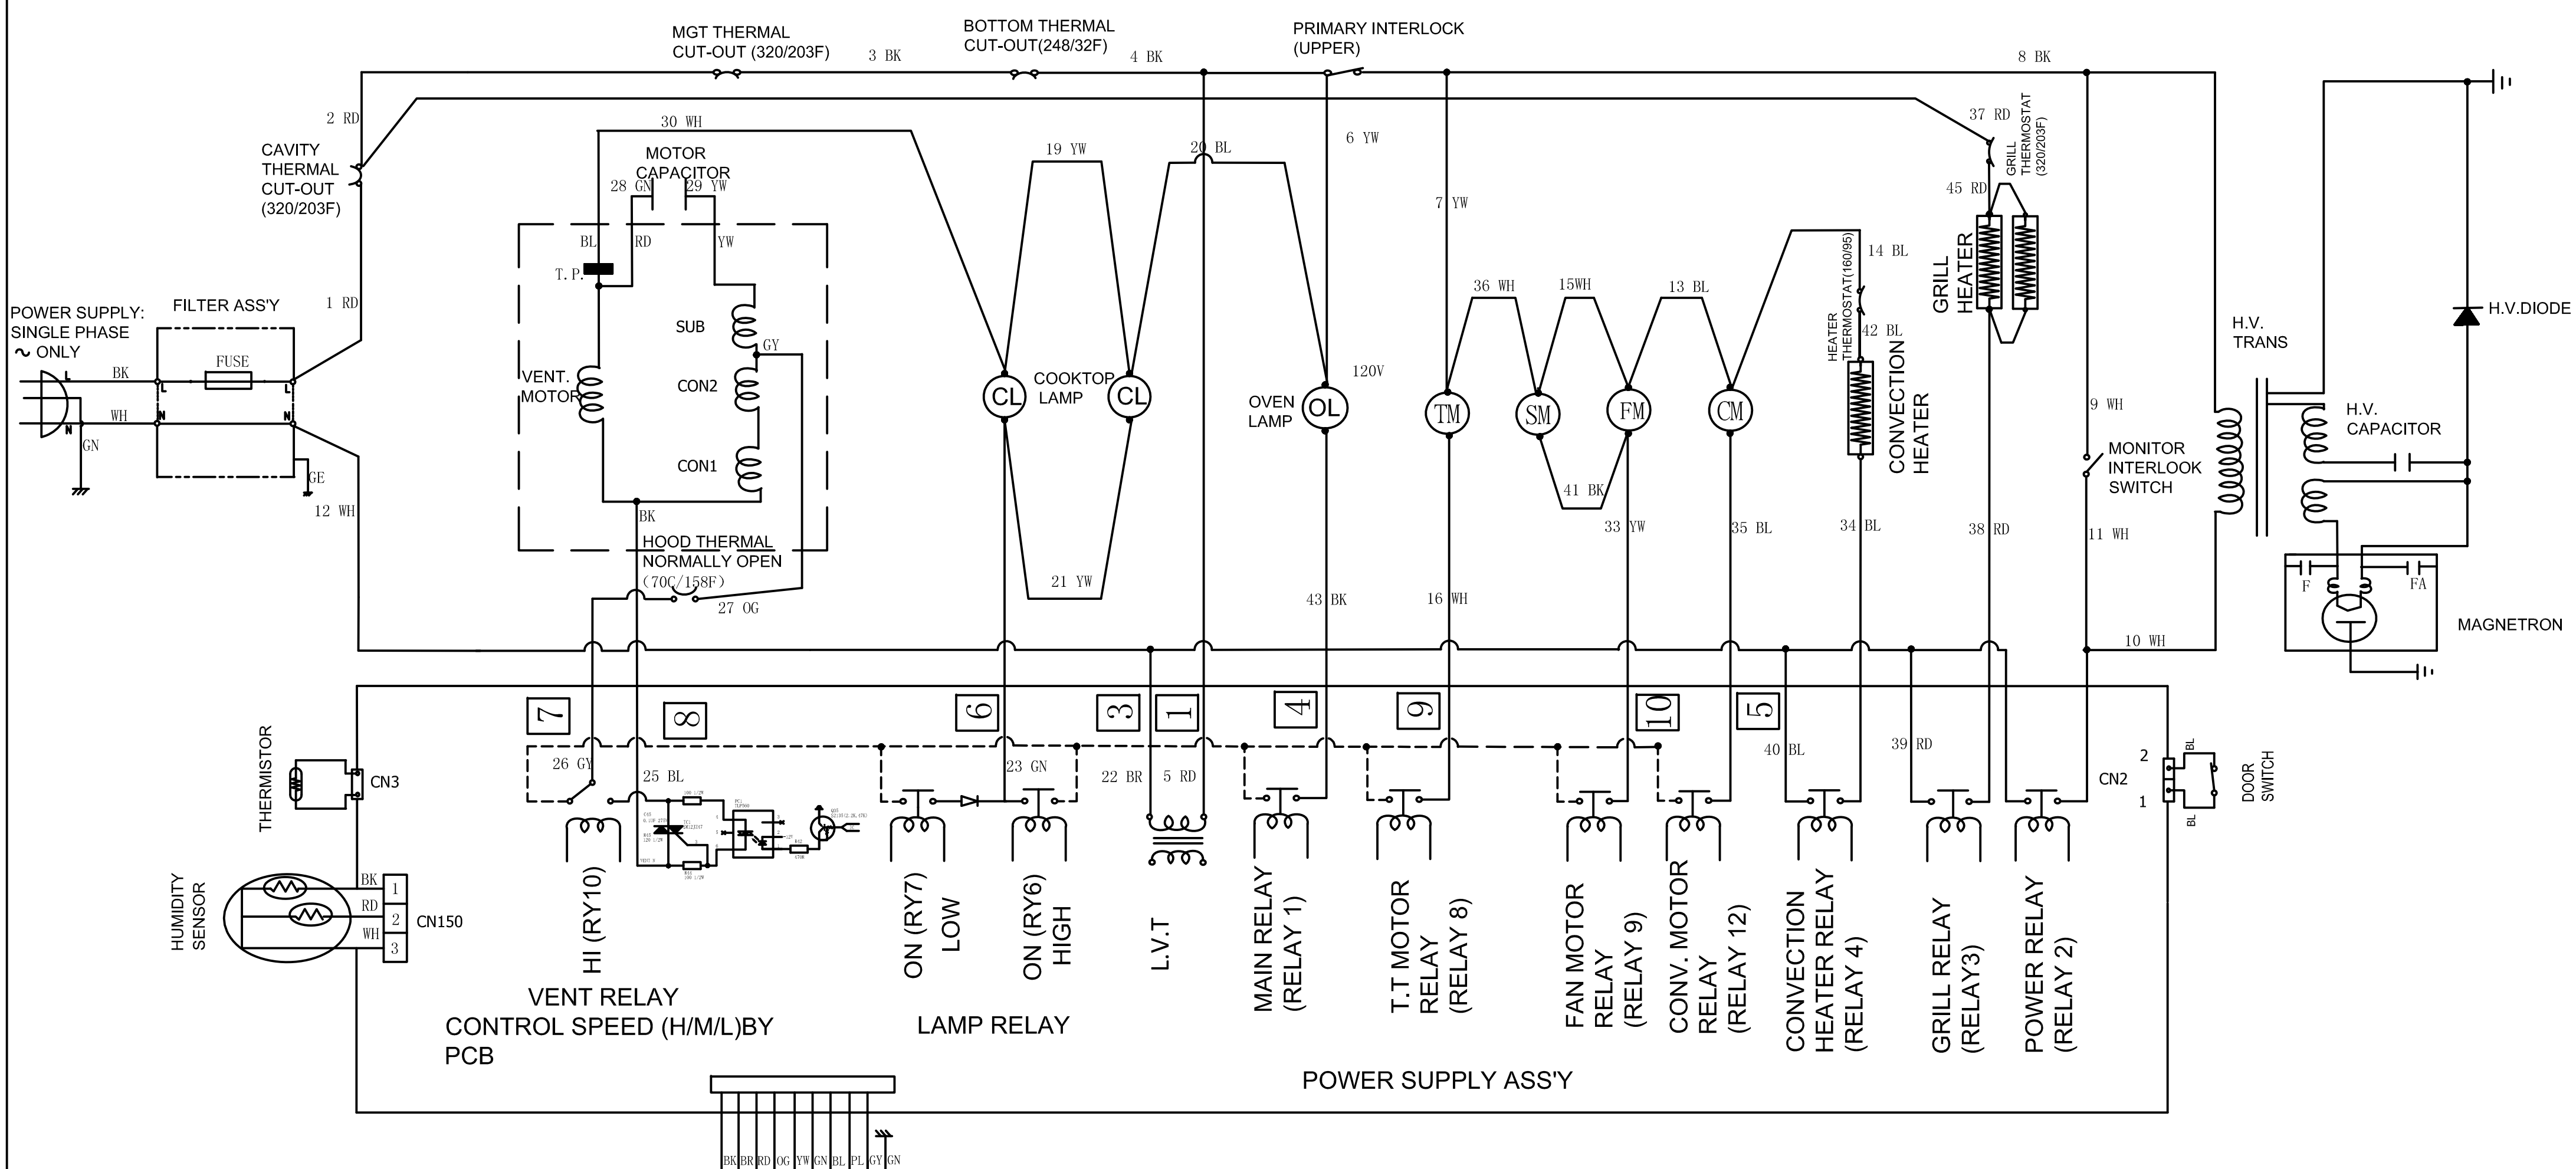


NOTE:

[CONDITION]
DOOR:CLOSED
COOK:OFF

OL:OVEN LAMP	OG:ORANGE	BR:BROWN
FM:FAN MOTOR	YW:YELLOW	WH:WHITE
TM:TURNTABLE MOTOR	RD:RED	BK:BLACK
SM:STIRRER MOTOR	BL:BLUE	GY:GREY
CL:COOKTOP LAMP	GN:GREEN	PK:PINK
CM:CONVECTION MOTOR		PL:PURPLE

HOOD THERMAL NORMALLY OPEN(70C/158F):It's normally open, until the temperature is over than 158F, it's ON.